


XV17AS(C)/XV17ASS(C)/XV17ATS(C) WIRING DIAGRAM

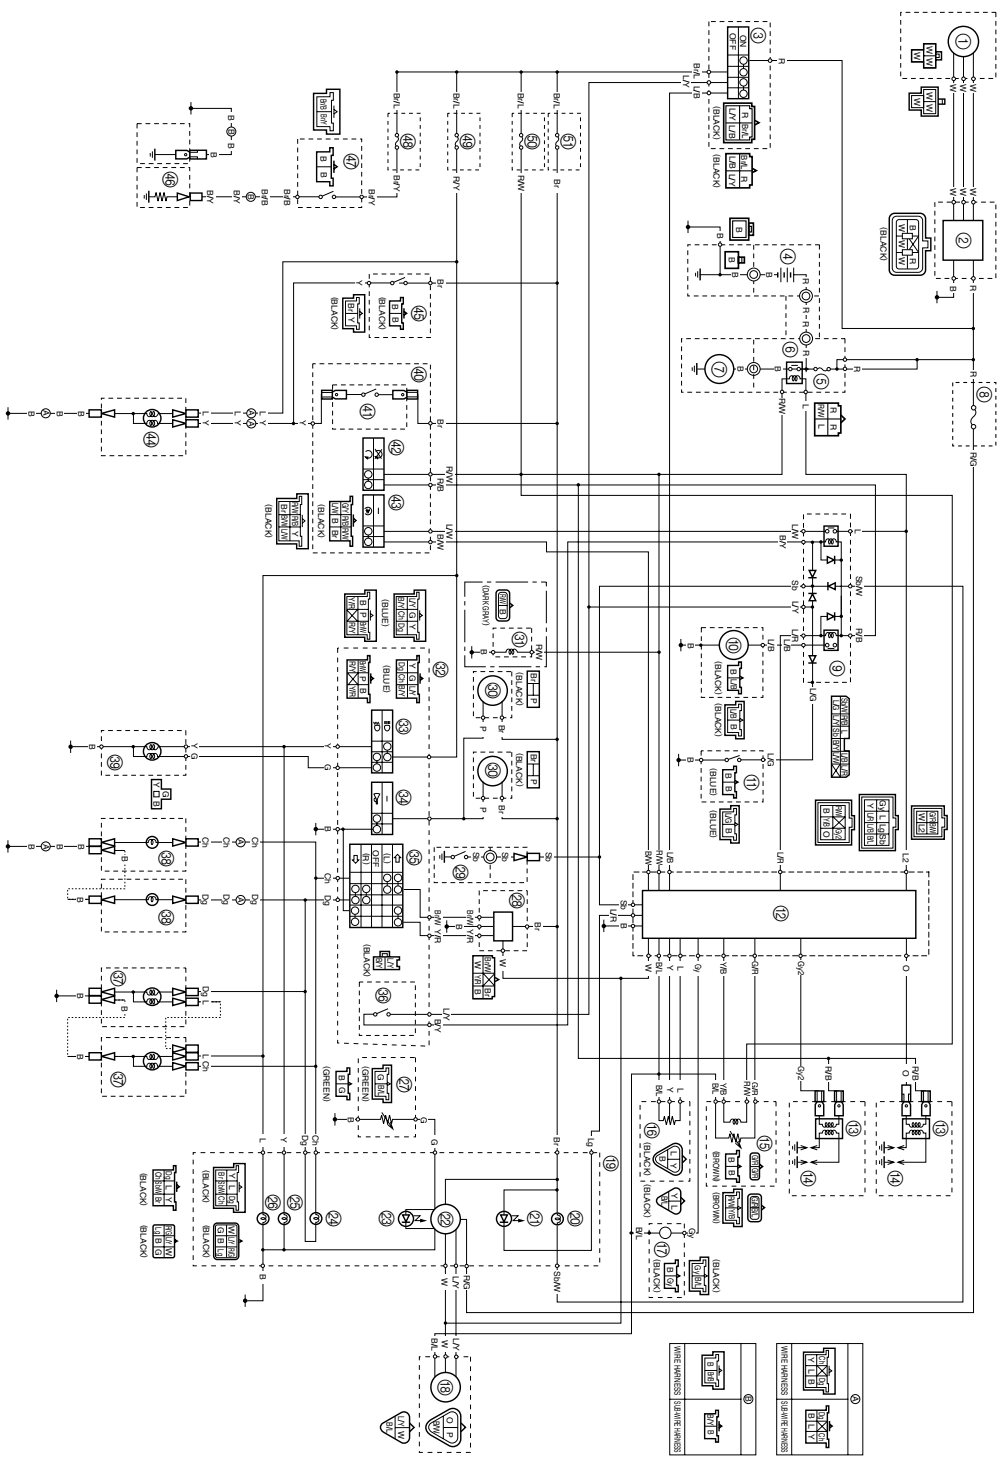

COLOR CODE

B	black
Br	brown
Ch	chocolate
Dg	dark green
G	green
Gy	gray
L	blue
Lg	light green
O	orange

P	pink
R	red
Sb	sky blue
W	white
Y	yellow
BL	black/blue
B/W	black/white
B/Y	black/yellow
B/B	brown/black

Br/L	brown/blue
B/W	brown/white
B/Y	brown/yellow
G/R	green/red
G/Y	green/yellow
L/B	blue/black
L/G	blue/green
L/R	blue/red
L/W	blue/white

L/Y	blue/yellow
R/B	red/black
R/G	red/green
R/W	red/white
R/Y	red/yellow
Sb/W	sky blue/white
Y/B	yellow/black
Y/R	yellow/red

- ① Generator
- ② Rectifier/regulator
- ③ Main switch
- ④ Battery
- ⑤ Main fuse
- ⑥ Starter relay
- ⑦ Starter motor
- ⑧ Backup fuse
- ⑨ Relay unit
- ⑩ Fuel pump
- ⑪ Sidestand switch
- ⑫ Ignitor unit
- ⑬ Ignition coil
- ⑭ Spark plug
- ⑮ Decompression solenoid
- ⑯ Throttle position sensor
- ⑰ Pickup coil
- ⑱ Speed sensor
- ⑲ Meter assembly
- ⑳ Neutral indicator light
- ㉑ Engine trouble indicator light
- ㉒ Speedometer, combination meter and fuel level meter
- ㉓ Fuel level indicator light
- ㉔ Turn signal indicator light
- ㉕ High beam indicator light
- ㉖ Water light
- ㉗ Fuel sender
- ㉘ Turn signal relay
- ㉙ Neutral switch
- ㉚ Horn
- ㉛ Solenoid valve (for California)
- ㉜ Left handiebar switch
- ㉝ Dimmer switch
- ㉞ Horn switch
- ㉟ Turn signal switch
- ㊱ Clutch switch
- ㊲ Front turn signal/position light
- ㊳ Rear turn signal light
- ㊴ Headlight
- ㊵ Right handiebar switch
- ㊶ Front brake light switch
- ㊷ Engine stop switch
- ㊸ Start switch
- ㊹ Tail/brake light
- ㊺ Rear brake light switch
- ㊻ Carburetor heater
- ㊼ Thermo switch
- ㊽ Carburetor heater fuse
- ㊾ Headlight fuse
- ㊿ Ignition fuse
- ① Signaling system fuse